

**Note:** Please ensure to remove Tubular Latch/ Sashlock or Bathroom Lock from the door before installation.

**Two styles of fixings are included with your Lever on Rose handles: Bolt-through Fixing and Face Fixing. Bolt-through fixing is the recommended method as it offers the most secure connection and minimises the risk of damage to your door.**

- 1 Choose the suitable installation method using the appropriate template illustrated by the diagrams.
- 2 Mark the centre of hole **A** using a bradawl.
- 3 Using a 20mm drill bit, drill the centre hole of point **A**.

### FOR LOCKS/ LATCHES WITH BOLT-THROUGH FIXING HOLES

3.1. Mark and drill 5mm holes completely through the door at positions B1 for Bolt-Through Fixings.

### FOR LATCHES WITHOUT BOLT-THROUGH FIXING HOLES

(Refer to FaceFix drilling template)

3.2. Mark and drill 2mm 2mm pilot holes to a depth of 5mm at positions **C**


- 4 Insert the spindle into one of the levers and securely fix the grub screw, ensuring enough spindle is free to pass through the door and to be secured in the opposing lever. Remove the rose cover.
- 5 Replace the mortice latch/sash-lock/bathroom lock into the door.
- 6 For **bolt-through fixing**, remove both male and female bolts from the fixings provided. Insert the female bolts through appropriate holes in the round rose and tightly fasten the male bolts from the back of the round rose door handle. Insert spindle into the centre hole of the lever handle and tighten grub screw.

For **face fixing**, place the lever handle onto the door so the spindle passes through the mortice latch/sash-lock/bathroom lock follower and line up the holes on the rose with those pre-drilled at C positions on the door. Use the four woodscrews provided on each lever.

Place the other lever handle into the remaining protruded spindle from the opposite side of the door and hand tighten woodscrews on rose fixture as above.

- 7 Tighten up the grub screw on the opposite lever and recheck all fixings are secure. If the levers do not operate freely, check alignment of all components.
- 8 Replace both rose covers.

### Bolt-Through Drilling Template

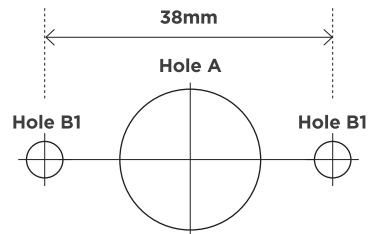

### Face Fix Drilling Template

